



## NETWORK UNLOCKING YOUR MOBILE



- Insert Virgin SIM
- Power on
- Press the '#' key once (# will display on the phone screen)
- Press the '\*' key three times quickly (#p will display on the phone screen)
- Press '\*' key four times quickly (#pw will display on the phone screen)
- Press '\*' key two times quickly (#pw+ will display on the phone screen)

### 2100/3315

- Enter the 10 digit unlock password (#pw+ 10 digit unlock passcode will display on screen)
- Press '\*' key two times quickly (#pw+ 10 digit unlock passcode + will display on the screen)
- Press '1' key once
- (#pw+ 10 digit unlock passcode +1 will display on the screen)

### 1100/3100/3120/3200/3220/6610i

- Enter the 15 digit unlock password (#pw+ 15 digit unlock passcode will display on screen)
- Press '\*' key two times quickly (#pw+ 15 digit unlock passcode + will display on the screen)
- Press '1' key once
- (#pw+ 15 digit unlock passcode +1 will display on the screen)

### To Complete (all Nokias)

- Press '#' (**SIM Restriction OFF** will appear on screen for 1 second)
- The handset is now unlocked.

### Nokia Error Messages

**Code error** – appears if the unlock password entered is incorrect. You need to go through the whole process again, ensuring you enter the correct 10-digit code.

**SIM was not restricted** – appears if the handset has not been locked to a network. You should be able to use any SIM card in this handset.

**Not allowed** - If the syntax while entering the unlock password is incorrect, nothing happens. If you have tried to unlock the phone 5 times with an incorrect password any further attempts to unlock the phone will generate this message. The phone will need to be electronically unlocked at a Nokia service centre.

### ERICSSON A2618/T230/T610/T630/Z200

- Insert non-Virgin SIM card
- LEFT ARROW \* \* LEFT ARROW.
- The phone will then display a Network lock and Network SUB lock.
- Select Network lock
- Enter in the NCK code as phone requests



## **T180/T190/T300/V171/V220**

- Insert non-Virgin SIM card.
- Handset will respond with *Invalid SIM / Please enter special code*
- Enter unlock code
- Code may take 24 hours to register



## **GD35**

- Insert non-Virgin SIM
- Enter 746
- Press menu key (top right hand)
- Press menu key again
- Scroll to Sub Network
- Press menu key
- Enter unlock code
- Press menu key (O.K).



- Insert non-Virgin SIM card
- Handset will respond with *NCSK*.
- Enter unlock code



## **A35/55/65**

- Turn phone on without any SIM card
- Message will be 'Enter SIM card'
- Enter Unlock code as *\*#0000\*12345678#* (for A55/65) or *\*#0004\*12345678#* (for A35) where '12345678' is the 8-digit unlock code
- 'Please Wait' message will appear, followed by 'Net.Subset Code' or 'Network Lock detected'.
- Phone can now be switched off and new SIM entered
- If the wrong code is entered, error message 'Invalid Entry' will appear.



## **C1100**

- Enter code into the main screen *2945#\*1201#*
- Clear back to the main screen
- Go to the menu Then Settings
- Go to the Security settings
- Go to Sim Locks
- Go to Network subset
- Deactivate OK
- Enter unlock code from care and press OK
- Phone screen will display DONE